

PC-ID bound license -Seskion GmbH-

Content:

- Download the Simulyzer Software
- Starting the Simulyzer Software
- Get Seskion License
- License activation
 - Saving the file in the right folder
 - Loading the file in the software

Version:	(1.0) 28.11.2021 – Creation
	(1.1) 07.12.2021 – Addition of saving the file
	(1.2) 12.07.2022 – Restructuring of the points

PC-ID bound license

Download the Simulyzer Software


The software for our simulyzer boxes can be downloaded from our website without any problems. Here in the example this is illustrated with the PSI5 Simulyzer software. For any other software this process is identical. First go to <https://www.sesktion.de/produkte/> to select your software. You will find the following overview on the page:



Version	Date	Download
V2.6.23	12.10.2021	PSI5-SimulyzerSetup_V2_6_23.msi
V2.6.22	01.12.2020	PSI5-SimulyzerSetup_V2_6_22.msi
V2.6.21.1	01.09.2020	PSI5-SimulyzerSetup_V2_6_21_1.msi
V2.6.20	09.10.2019	PSI5-SimulyzerSetup_V2_6_20.msi
V2.6.17	14.11.2018	PSI5-SimulyzerSetup_V2_6_17.msi
V2.6.15	15.07.2018	PSI5-SimulyzerSetup_V2_6_15.msi
V2.6.8	10.11.2016	PSI5-SimulyzerSetup_V2_6_8.msi

Get Download registration

If you are downloading software from us for the first time, you will need to register for free. To do this, click on **Get Download registration** at the bottom left. You will now be forwarded to the registration page, where you can enter three mandatory details as well as other optional details.

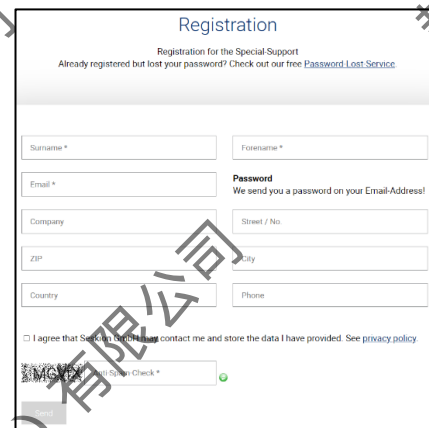

Registration

Registration for the Special-Support

Already registered but lost your password? Check out our free [Password Lost-Service](#)

Surname *

Forename *

Email *

Password

We send you a password on your Email-Address!

Company

Street / No.

ZIP *

City

Country


Phone

☐ I agree that Sesktion AG may contact me and store the data I have provided. See [privacy policy](#)

Get Download registration

To be able to download the latest software now, please go to the listed software versions as shown in the first screenshot. To download the latest version, please look at the version number and date. For the download please click on the respective version on the right side under Download.


Now you can download the latest version of our Software. Make sure that you have the newest one to get all the newest features. The software is continuously updated.

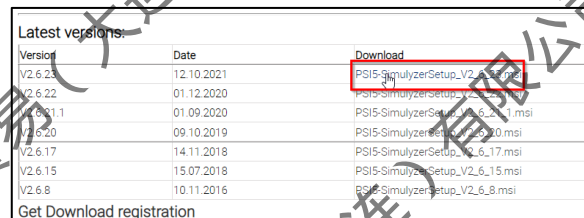

Version	Date	Download
V2.6.23	12.10.2021	PSI5-SimulyzerSetup_V2_6_23.msi
V2.6.22	01.12.2020	PSI5-SimulyzerSetup_V2_6_22.msi
V2.6.21.1	01.09.2020	PSI5-SimulyzerSetup_V2_6_21_1.msi
V2.6.20	09.10.2019	PSI5-SimulyzerSetup_V2_6_20.msi
V2.6.17	14.11.2018	PSI5-SimulyzerSetup_V2_6_17.msi
V2.6.15	15.07.2018	PSI5-SimulyzerSetup_V2_6_15.msi
V2.6.8	10.11.2016	PSI5-SimulyzerSetup_V2_6_8.msi

Get Download registration

A login window will appear where you can log in with your registered e-mail address and the password we sent you.

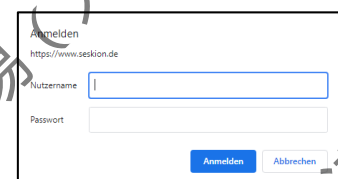

Anmelden

<https://www.sesktion.de>

Nutzername

Passwort

Anmelden Abbrechen

If the Microsoft Defender should report, you can ignore it and select **Run anyway**.


Install the software as specified. A desktop link will be created automatically.




PC-ID bound license

Starting the Simulyzer Software


If you have not yet connected a Simulyzer box to the PC, a short note will appear to inform you that no box has been detected and that the software will therefore only work in offline mode.

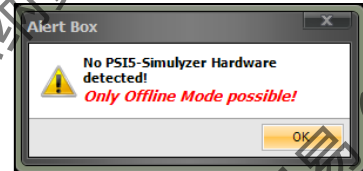

If a Simulyzer box is connected to the PC, or if you have closed the message box with **OK**, you will now see the interface of the Simulyzer software:

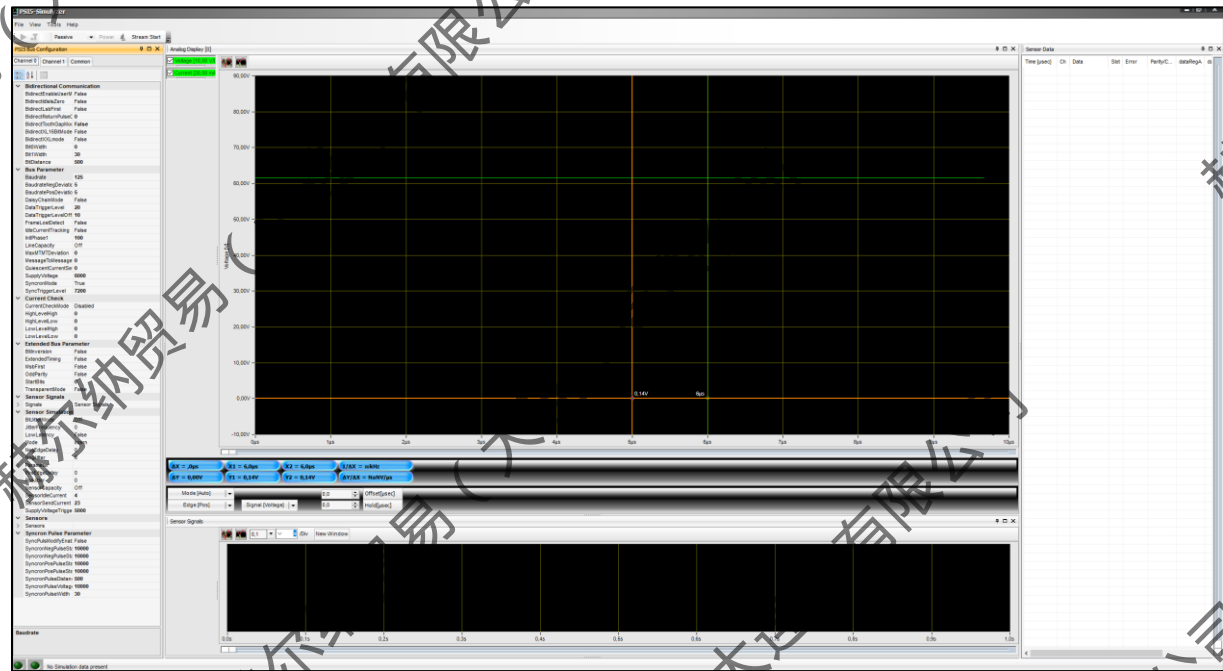

Now please open under **Help** the menu **About**.
A small new window will open here.

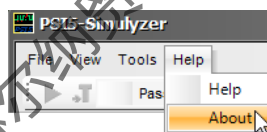

Please copy the complete **Host-ID** and send it to SesKion. We will then create the license for you.



PC-ID bound license

Get SesKion License

If you have acquired a Software license from SesKion GmbH, which is either a PC-ID bound license or a sensor model, then you will receive a file named "seskionLicense.xml" via E-Mail from one of our colleagues. If this does not happen, please contact sales@seskion.de.

License activation

When you have received the E-Mail with the license, you must save the file on your PC respectively on the PC to which the Simulyzer is connected. There are two methods how you can save the file:

1. Saving the file in the right folder

Install the GUI Software on the test computer. If you have problems with this, I recommend the Application Note "[Simulyzer-Software Operating Help](#)". There everything is described to the download of the Software.

If you have downloaded the Windows GUI, you can simply drag and drop the file into the folder of the respective Simulyzer. In the example screenshot you can see how the file is moved to a PSI5-Simulyzer folder. The folders of the Simulyzers are mostly listed under **C:\Program Files (x86)\SesKion GmbH**.



2. Loading the file in the Software

Install the GUI Software on the test computer. If you have problems with this, I recommend the Application Note "[Simulyzer-Software Operating Help](#)". There everything is described to the download of the Software.

If you have downloaded the Windows GUI you have to open it now. Click on the **Help** menu item to go to the **About** menu. A new window opens here.

In the window you now go to **Product License** and can now read in the license via **Install License**, no matter where it is located on your computer and what it is called. You can also request additional licenses directly from us via **Request License**.

